 


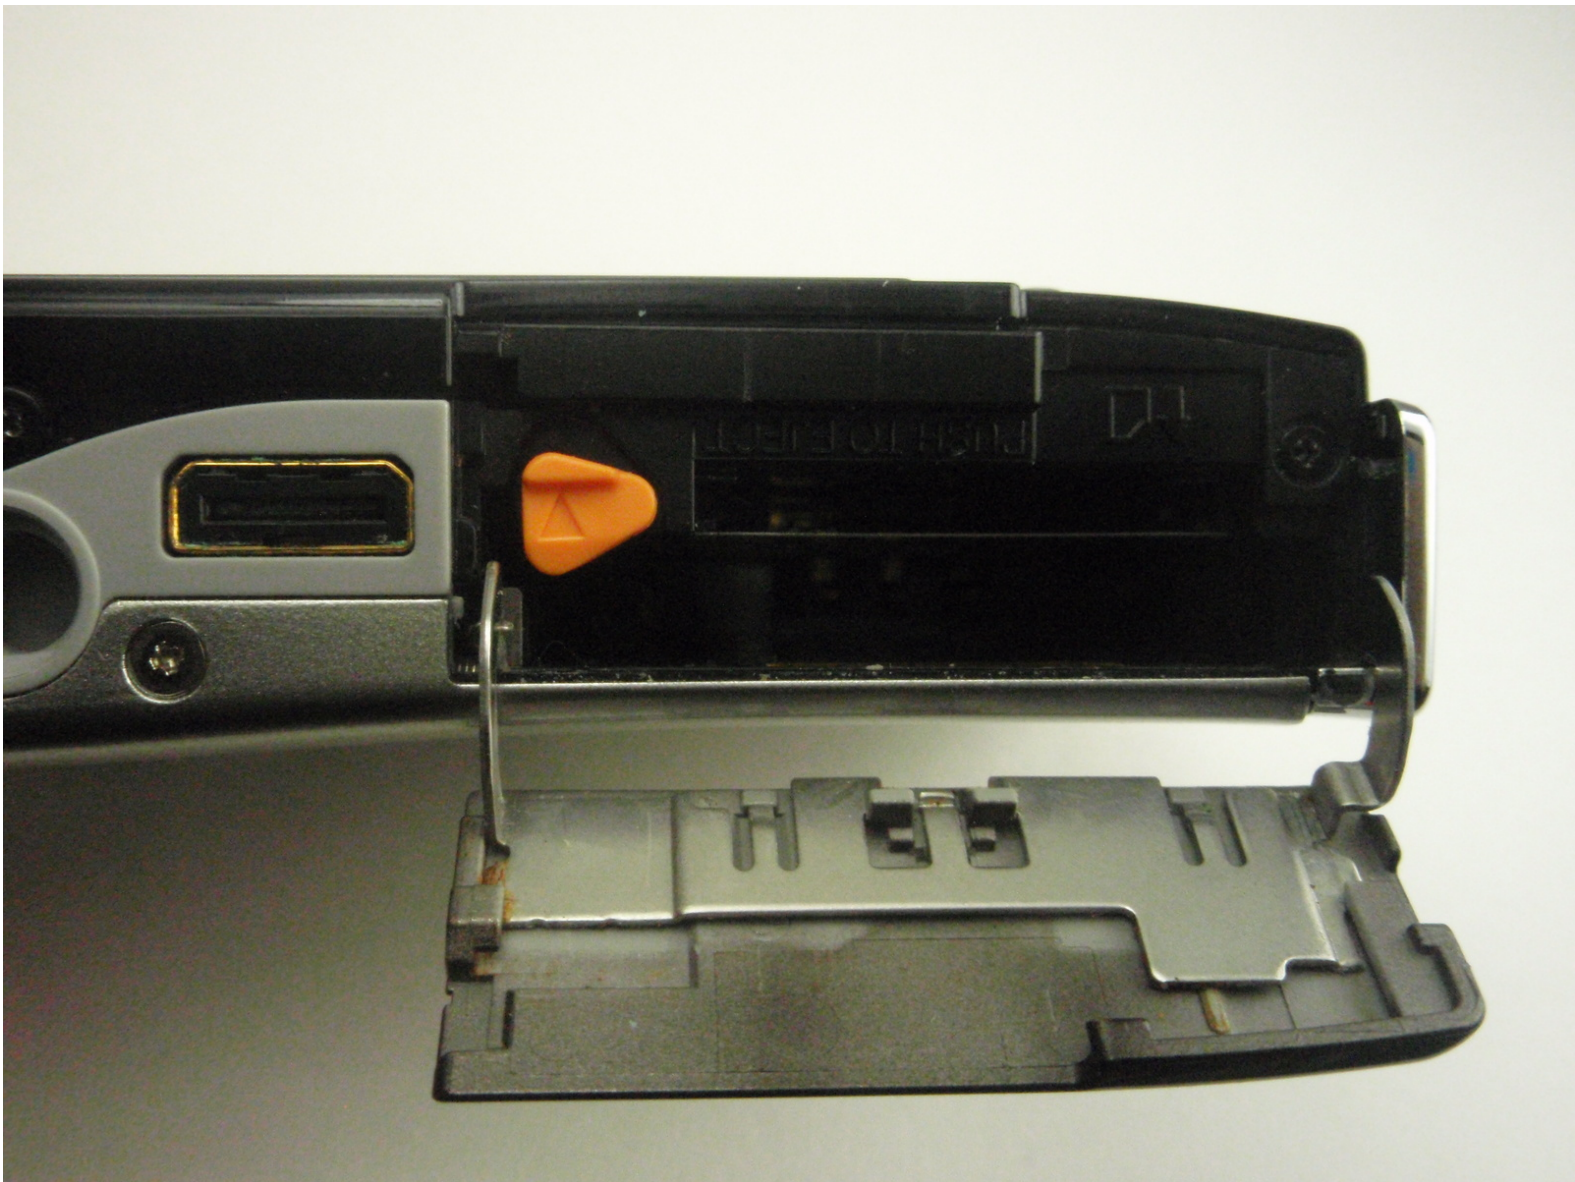

Nikon Coolpix S51c Memory Card Replacement

How to take out the memory card if you need to replace it or download the data using a card reader instead of a USB cord.

Written By: Ryan



INTRODUCTION

How to take out the memory card if you need to replace it or download the data using a card reader instead of a USB cord.

Step 1 — Memory Card



 
- Turn the camera upside down to find the battery door.

Step 2



- Slide the battery door in the direction of the arrow, toward the LCD screen. The door will then swing open.

Step 3

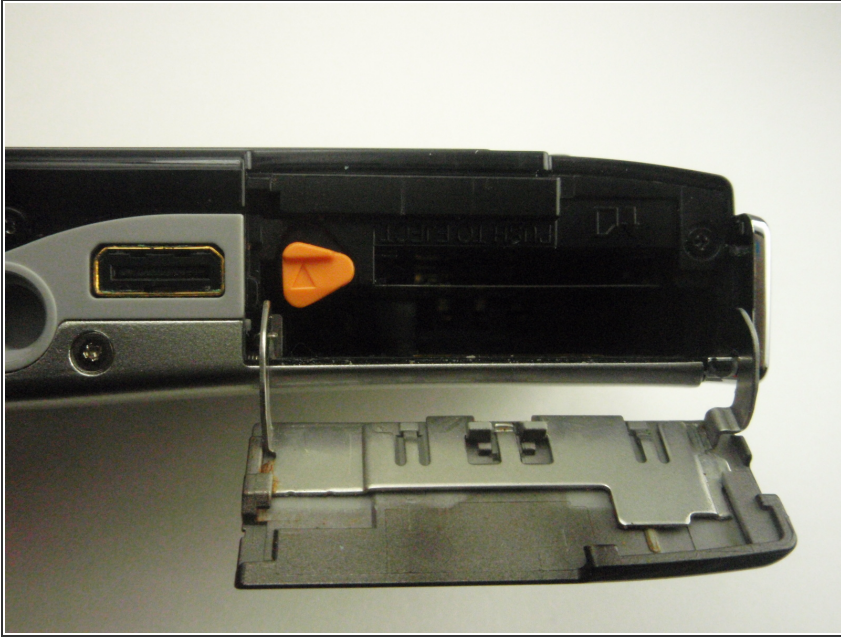

- Push memory card further into the camera. This will release the memory card making it available to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 06:21:37 PM.